

# WATTYL TIMBERCLEAN

## PRODUCT DESCRIPTION

Watty Timberclean has been formulated for cleaning timber decks and outdoor wooden furniture. It has been designed to lift algae and black mould from weathered timber surfaces and provide a clean surface prior to the application of stains or coatings.

## INTENDED USES – EXTERIOR

- Timber decks
- Outdoor wooden furniture
- Barbecues
- Exterior timber surfaces

## TECHNICAL DATA

- |                         |                               |
|-------------------------|-------------------------------|
| • Vehicle Type          | Not applicable                |
| • Pigmentation          | Not applicable                |
| • Solvent               | Water                         |
| • Pot Life              | Not applicable                |
| • Finish                | Not applicable                |
| • Colour                | Clear                         |
| • Touch Dry Time        | Not applicable                |
| • Recoat Time           | When timber is thoroughly dry |
| • Preparatory Coat      | Not applicable                |
| • Theoretical Coverage  | Not applicable                |
| • Dry Film Thickness    | Not applicable                |
| • Usual Number of Coats | Not applicable                |
| • Toxicity              | Non toxic                     |
| • Durability            | Not applicable                |
| • Thinning and Clean Up | Clean water                   |
| • V.O.C.                | 246g/L as per EC-07-01        |
| • Pack Sizes            | 1L                            |



## PERFORMANCE PARAMETERS

### Features

- Watty! Timberclean is bleach free
- Watty! Timberclean is caustic and alkali free
- Removes dirt, grease, mould, mildew and algae

### Constraints

- Watty! Timberclean is not intended to strip wax or coatings from surfaces

## SURFACE PREPARATION

Not applicable

## APPLICATION

**For decks:** Add 1 part Watty! Timberclean to 10 parts clean water. Apply to the deck using a garden sprayer or watering can. Lightly scrub the wetted area with a soft broom, do not allow Watty! Timberclean to dry. Rinse or hose with fresh water. Deck cleaning is best done during cool or overcast weather. In hot weather work in sections cleaning and rinsing before the cleaner dries.

**For timber furniture:** Add 1 part Watty! Timberclean to 10 parts clean water. Apply to outdoor furniture using a sponge. Lightly scrub the wetted area with a soft brush, do not allow the Watty! Timberclean to dry. Rinse or hose with fresh water. For greasy areas or hard to remove stains, add 1 part Watty! Timberclean to 2 parts clean water.

**For barbecues:** Where there are greasy areas on the timber add 1 part Watty! Timberclean to 2 parts clean water. Apply to timber using a sponge. Lightly scrub the wetted area with a soft brush, do not allow the Watty! Timberclean to dry. Rinse or hose with fresh water. For persistent greasy spots, apply Watty! Timberclean straight from the bottle. Allow it to soften the grease for a few minutes, scrub with a soft brush. Rinse or hose with fresh water.

## NOTES

 
 
Ensure timber is thoroughly dry before proceeding with staining or painting.

## MATERIAL SAFETY DATA SHEETS

Watty! (N.Z.) Ltd Material Safety Data Sheets contain pertinent information that you may need to protect your employees and customers against any known health or safety hazards associated with our products, and are available on request.

NOTE: The information concerning the use and application of these products is intended for use by professional specifiers and is believed to be correct at the date of printing, and is given in good faith. Watty! (NZ) Ltd reserves the right to alter the product or specification without notice. The user should check the date of printing, and if more than 24 months have elapsed, should verify with our nearest sales office that the information is still current. Because we cannot control the way these products may be used, or the conditions they may be exposed to, we can give no express guarantees in respect of these products or their performance. However certain guarantees may be implied by law.

Watty! (N.Z.) Limited, P. O. Box 1545, Auckland, 1. Phone 09 820 6700 Fax 09 820 6572



WATTYL (NZ) LTD

INFORMATION HELP LINE: 0800 735551 (New Zealand)